



Model 5673B Electrical DMM Test Lead Kit



MODEL 6479

MODULAR PROBE SET WITH STAINLESS STEEL TIP


QTY 2 : 1 RED, 1 BLACK

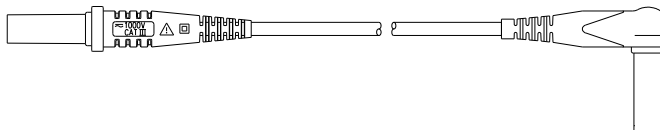

MODEL 5907A

FLEXIBLE TEST LEAD SET WITH RIGHT ANGLE AND STRAIGHT BANANA PLUGS

QTY 2 : 1 RED, 1 BLACK



MODEL 6262

EXTENDED FINE POINT TEST PROBE ADAPTER SET


QTY 2 : 1 RED, 1 BLACK



MODEL 6203

INSULATED SPADE LUG ADAPTER SET


QTY 2 : 1 RED, 1 BLACK

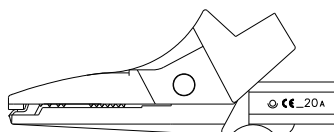

MODEL 6041B

EXTRA LARGE ALLIGATOR CLIP SET


QTY 2 : 1 RED, 1 BLACK



MODEL 5916A

MEDIUM ALLIGATOR CLIP SET

QTY 2 : 1 RED, 1 BLACK

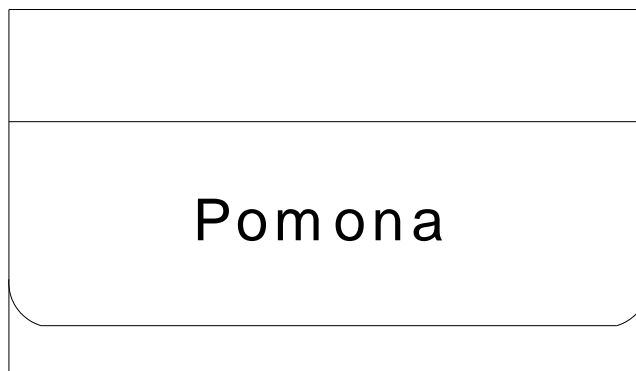

FOUR-FOLD NYLON POUCH

FEATURES:

- ✓ Test leads with a right angle banana plug are ideal for use with hand held digital multimeter.
- ✓ Flexible test leads feature high strand count silicone wire for extreme flexibility and high temperature resistance.
- ✓ Banana plugs are molded directly to the wire for superior pull strength.
- ✓ Insulated extended fine point adapter allows easy access of hard to reach test points.
- ✓ Probes, alligator clips and spade lugs fit directly onto test leads for testing versatility.
- ✓ Test accessories conveniently store in the four-fold nylon pouch.
- ✓ Compatible with most multimeters that accepts safety style sheath banana plugs.
- ✓ CE Compliant; complies with IEC 1010-2-031 standard for hand held accessories.

Pomona[®]

The items included with this product are certified to meet IEC 1010-2-031 safety requirements.

Les éléments inclus avec ce produit sont certifiés pour répondre à des exigences de sûreté du IEC 1010-2-031.

Los items incluidos con este producto se certifican para resolver requisitos de seguridad del IEC 1010-2-031.

– Only IEC 1010 type shrouded test plugs should be used with IEC 1010 type jacks. NEVER INSERT A PROBE TIP WITH BANANA SPRING INTO A TEST ACCESSORY JACK THAT WILL BE USED AS A HAND HELD PROBING DEVICE

–Seuls les vérificateurs de tension renforcés de type IEC 1010 devraient être utilisés avec des jacks de type IEC 1010. NE JAMAIS INSERER DE BOUT DE SONDE AVEC RESSORT BANANE DANS UN JACK D'ESSAI D'ACCESSOIRES QUI SERA UTILISE COMME DISPOSITIF DE SONDAGE A MAIN.

–Se deben usar sólo tapones de prueba reforzados del tipo IEC 1010 con receptáculos de tipo IEC 1010. NUNCA INTRODUZCA UNA CLAVIJA CON UN MUELLE TIPO BANANA EN UN RECEPTACULO DE PRUEBA QUE A SU VEZ SE USE COMO APARATO DE PRUEBA MANUAL.



Both Direct and Alternating Current.
Courant Continu et Alternatif.
Corriente Directa y Alterna.



Double Insulation or Reinforced Insulation.
Isolation Double ou Isolation Renforcée.
Aislamiento Doble o Aislamiento Reforzado.

CAT

Overvoltage Category I, II, III or IV.
Surtension Catégorie I, II, III ou IV.
Sobretensión de Categoría I, II III o IV.



Caution ! Refer to Accompanying Documents.
Attention ! Se Reporter aux Documents joints.
¡Peligro! Consulte los Documentos Adjuntos.



Caution ! Risk of Electric Shock.
Attention ! Risque de Choc Électrique.
¡Peligro! Riesgo de Sacudida Eléctrica.

Pomona Electronics

PO Box 9090, Everett, WA 98206-9090 TEL: 800-490-2361



All dimensions are in inches. Tolerances (except noted): .xx = ±.02" (.51 mm), .xxx = ±.005" (.127 mm).

All specifications are to the latest revisions. Specifications are subject to change without notice.

Registered trademarks are the property of their respective companies.

TRANSCAT[®]



Visit us at Transcat.com!

35 Vantage Point Drive // Rochester, NY 14624 // Call 1.800.800.5001