

53131A/132A/181A Counters

High-performance, low-cost counters simplify and speed systems and bench frequency measurements

A family of universal and RF counters to meet your needs

HP 53131A/132A/181A high-performance counters give you fast, precise frequency measurements at an affordable price. These counters feature an intuitive user interface and one-button access to frequently used functions so you can make accurate measurements quickly and easily.

Real-time digital signal processing technology is used to analyze data while simultaneously taking new readings, speeding measurement throughput. The technology, developed for HP's high-end line of modulation domain analyzers, allows the counters to gather more data for each measurement, so you get higher-resolution measurements in a fraction of the time it takes other reciprocal counters.

The HP 53131A/132A/181A counters offer built-in statistics and math functions so you can scale measurements and simultaneously measure and track average, min/max and standard deviation. Automated limit testing lets you set upper and lower limits for any measurement. An analog display mode lets you see at a glance whether a measurement is within pass/fail limits. The counters flag out-of-limit conditions and can

generate an output signal to trigger external devices when a limit is exceeded. For quick access to frequently used tests, a single keystroke recalls up to 20 different stored front-panel set-ups.

For computer-controlled systems applications, each counter includes a standard HP-IB interface with full SCPI-compatible programmability and a data transfer rate of up to 200 fully formatted measurements per second. The standard RS-232 talk-only interface provides printer support or data transfer to a computer through a terminal-emulation program.

HP 53131A Universal Counter

The two-channel HP 53131A counter offers 10 digits per second of frequency resolution and a bandwidth of 225 MHz. Time interval resolution is specified at 500 ps. An optional third channel provides frequency measurements up to 3 GHz, 5 GHz, or 12.4 GHz. Standard measurements include frequency, period, ratio, time

- 225 MHz bandwidth (optional 1.5, 3, 5, or 12.4 GHz)
- 10- or 12-digit resolution with 1s gate time
- HP-IB interface standard
- Data transfer rate of up to 200 fully formatted measurements/sec



interval, pulse width, rise/fall time, phase angle, duty cycle, totalize, and peak voltage.

HP 53132A Universal Counter

For applications requiring higher resolution, the HP 53132A offers the same features and functions as the HP 53131A, with up to 12 digits/sec frequency resolution and 150 ps time interval resolution. In addition, the HP 53132A offers advanced arming modes for time interval measurements.

HP 53181A RF Counter

Optimized for RF applications, the single-channel 10 digit/s HP 53181A measures frequency, period and peak voltage. A digit-blanking function lets you easily eliminate unnecessary digits when you want to read measurements quickly. For higher-frequency measurements, choose an optional second channel that provides measurements up to 1.5 GHz, 3 GHz, 5 GHz, or 12.4 GHz. A self-guided shallow menu makes this counter exceptionally easy to use.

HP BenchLink Meter turns your counter into a single-channel data acquisition system

Used in conjunction with a HP 53131A/132A/181A counter, HP BenchLink Meter software gives you the flexibility to configure and run tests from your PC, making data gathering more convenient. HP BenchLink Meter also lets you get more information from your data by providing a variety of basic display modes and analysis tools so you can see your data the way you need it.

HP BenchLink Meter lets you:

- completely configure tests using the HP 53131A/132A/181A counters, including measurement type, number of readings, measurement speed, and more.
- choose display modes from real-time strip chart, histogram, readout, and table mode.
- scale measurements data and make it look the way you want it.
- easily copy captured data to other programs for more complex analysis.

Optional timebases offer increased stability

Optional timebases are available for HP 53131A/132A/181A counters to increase measurement accuracy. Option 010 provides a high stability oven timebase with aging of less than 5×10^{-10} per day.

3-year warranty

Each HP 53131A/132A/181A counter comes with operating, programming and service manuals, a power cord and a full 3-year warranty.

Time Base

| Internal Time Base Stability (see graph 3 for timebase contribution of measurement error) | | | | | |
|---|------------|---------------------------|--|---|--|
| | | Standard (0° to 50° C) | Medium Oven (Option 001) | High Oven (Option 010) | Ultra High Oven (Option 012 for HP 53132A only) |
| Temperature Stability (referenced to 25°C) | | $< 5 \times 10^{-6}$ | $< 2 \times 10^{-7}$ | $< 2.5 \times 10^{-9}$ | $< 2.5 \times 10^{-9}$ |
| Aging Rate (after 30 days) | Per Day: | | $< 4 \times 10^{-8}$ | $< 5 \times 10^{-10}$ | $< 1 \times 10^{-10}$ |
| | Per Month: | $< 3 \times 10^{-7}$ | $< 2 \times 10^{-7}$ | $< 1.5 \times 10^{-8}$ | $< 3 \times 10^{-9}$ |
| | Per Year: | | | | $< 2 \times 10^{-8}$ |
| Turn-on stability vs. time (in 30 minutes) | | | $< 2 \times 10^{-7}$ referenced to 2 Hr | $< 5 \times 10^{-9}$ referenced to 24 Hr | $< 5 \times 10^{-9}$ referenced to 24 Hr |
| Calibration | | Manual Adjust | Electronic | Electronic | Electronic |

Note that power to the time base is maintained when the counter is placed in standby via the front panel switch. The internal fan will continue to operate when in standby to maintain long-term measurement reliability.

Instrument Inputs

| Input Specifications Channel 1 & 2 (53131A, 53132A) ¹ Channel 1 (53181A) | |
|---|--|
| Frequency Range | |
| dc Coupled | dc to 225 MHz |
| ac Coupled | 1 MHz to 225 MHz (50 Ω) 30 Hz to 225 MHz (1 MΩ) |
| FM Tolerance | 25% |
| Voltage Range and Sensitivity (Sinusoid)² | |
| dc to 100 MHz | 20 mVrms to ±5 V ac + dc |
| 100 MHz to 200 MHz | 30 mVrms to ±5 V ac + dc |
| 200 MHz to 225 MHz | 40 mVrms to ±5 V ac + dc (all specified at 75 mVrms with opt. rear connectors) ³ |

¹ Specifications and Characteristics for Channels 1 and 2 are identical for both Common and Separate configurations.

| Voltage Range and Sensitivity (Single-Shot Pulse) ² | |
|---|---|
| 4.5 ns to 10 ns Pulse Width | 100 mVpp to 10 Vpp (150 mVpp with optional rear connectors) ³ |
| >10 ns Pulse Width | 50 mVpp to 10 Vpp (100 mVpp with optional rear connectors) ³ |
| Trigger Level² | |
| Range | ± 5.125 V |
| Accuracy | ± (15 mV + 1% of trigger level) |
| Resolution | 5 mV |

² Values shown are for X1 attenuator setting. Multiply all values by 10 (nominal) when using the X10 attenuator setting.

³ When the 53131A or 53132A are ordered with the optional rear terminals (Opt 060), the channel 1 and 2 inputs are active on both front and rear of the counter. When the 53181A is ordered with the optional rear terminal, the channel 1 input is active on both front and rear of the counter. For this condition, specifications indicated for the rear connections also apply to the front connections.

| Damage Level | |
|-----------------------------|---|
| 50 Ω | 5 Vrms |
| 0 to 3.5 kHz, 1 MΩ | 350 Vdc + ac pk |
| 3.5 kHz to 100 kHz, 1 MΩ | 350 Vdc + ac pk linearly derated to 5 Vrms |
| >100 kHz, 1 MΩ | 5 Vrms |

⁴ When optional additional channels are ordered with opt 060, refer to configuration table for opt 060 under ordering info on page 8. There is no degradation in specifications for this input, as applicable.

⁵ Available for all measurements except Peak Volts. External Arm is referred to as External Gate for some measurements.

⁶ See Specifications for Pulse Width and Rise/Fall Time measurements for additional restrictions on signal timing characteristics

**Input Characteristics
Channel 1 & 2 (53131A, 53132A)¹
Channel 1 (53181A)**

| | |
|--------------------------|--|
| Impedance | 1M Ω or 50 Ω |
| 1 M Ω Capacitance | 30 pF |
| Coupling | ac or dc |
| Low-Pass Filter | 100 kHz, switchable -20 dB at > 1 MHz |
| Input Sensitivity | Selectable between Low, Medium, or High (default). Low is approximately 2x High Sensitivity. |

Trigger Slope Positive or Negative

Auto Trigger Level

| | |
|-----------------|---|
| Range | 0 to 100% in 10% steps |
| Frequency | > 100 Hz |
| Input Amplitude | > 100 mVpp (No amplitude modulation) |

Attenuator

| | |
|---------------|-----|
| Voltage Range | x10 |
| Trigger Range | x10 |

**Input Specifications⁴
Channel 3 (53131A, 53132A)
Channel 2 (53181A)**

| | |
|------------------------|---|
| Frequency Range | |
| Option 015 | 100 MHz to 1.5 GHz (for 53181A only) (see opt 030 for add'l specs) |
| Option 030 | 100 MHz to 3 GHz |
| Option 050 | 200 MHz to 5 GHz |
| Option 124 | 200 MHz to 12.4 GHz |

Power Range and Sensitivity (Sinusoid)

| | |
|------------|--|
| Option 030 | 100 MHz to 2.7 GHz: -27 dBm to +19 dBm 2.7 GHz to 3 GHz: -21 dBm to +13 dBm |
| Option 050 | 200 MHz to 5 GHz: -23 dBm to +13 dBm |
| Option 124 | 200 MHz to 12.4 GHz -23 dBm to +13 dBm |

Damage Level

| | |
|------------|---------|
| Option 030 | 5 Vrms |
| Option 050 | +25 dBm |
| Option 124 | +25 dBm |

Characteristics

| | |
|-----------|-------------|
| Impedance | 50 Ω |
| Coupling | AC |
| VSWR | <2.5:1 |

External Arm Input Specifications⁵

Signal Input Range TTL Compatible

Timing Restrictions

| | |
|--------------------|----------|
| Pulse Width | > 50 ns |
| Transition Time | < 250 ns |
| Start-to-Stop Time | > 50 ns |

Damage Level 10 Vrms

External Arm Input Characteristics⁵

| | |
|-------------------|----------------------|
| Impedance | 1 k Ω |
| Input Capacitance | 17 pF |
| Start/Stop Slope | Positive or Negative |

External Time Base Input Specifications

| | |
|---------------|--|
| Voltage Range | 200 mVrms to 10 Vrms |
| Damage Level | 10 Vrms |
| Frequency | 1 MHz, 5 MHz, and 10 MHz (53132A 10 MHz only) |

Time Base Output Specifications

| | |
|------------------|---|
| Output Frequency | 10 MHz |
| Voltage | > 1 Vpp into 50 Ω (centered around 0 V) |

Measurement Specifications

Frequency (53131A, 53132A, 53181A)

Channel 1 and 2 (53131, 53132); Channel 1 (53181)
Range 0.1 Hz to 225 MHz

Channel 3 (53131A, 53132A) Channel 2 (53181A)
Option 015 (53181 only) 100 MHz to 1.5 GHz
Option 030 100 MHz to 3 GHz
Option 050 200 MHz to 5 GHz
Option 124 200 MHz to 12.4 GHz

(Period 2 or 3 selectable via HP-IB only)

For Automatic or External Arming: (and signals < 100 Hz using Timed Arming)

LSD Displayed: $\left(\frac{t_{res}}{Gate\ Time}\right)^x \times \frac{Frequency\ or\ Period}{}$

RMS Resolution: $\left(\frac{\sqrt{t_{res}^2 + (2 \times Trigger\ Error^2)}}{Gate\ Time}\right) \times \frac{Frequency\ or\ Period}{}$

| | | | |
|-----------|-----------|-----------|-----------|
| | HP 53131A | HP 53132A | HP 53181A |
| t_{res} | | | |

typical 650 ps 200 ps 650 ps
see graphs for worst case resolution performance

For Automatic Arming: $Gate\ Time = \frac{N}{Frequency}$

where N= 1 for standard channel Frequency < 1 MHz
4 for standard channel Frequency > 1 MHz
128 for optional channel

Systematic Uncertainty: $\left(\pm Time\ Base\ Error \pm \frac{t_{acc}}{Gate\ Time}\right)^x \times \frac{Frequency\ or\ Period}{}$

| | | | |
|-----------|-----------|-----------|-----------|
| | HP 53131A | HP 53132A | HP 53181A |
| t_{acc} | | | |

typical 350 ps 100 ps 350 ps
worst case 1.25 ns 500 ps 1.25 ns

Trigger: Default setting is Auto Trigger at 50%

Period (53131, 53132, 53181)

Channel 1 and 2 (53131, 53132); Channel 1 (53181)
Range 4.44 ns to 10 s

Channel 3 (53131A, 53132A) Channel 2 (53181A)
Option 015 (53181 only) 0.66 ns to 10 ns
Option 030 0.33 ns to 10 ns
Option 050 0.2 ns to 5 ns
Option 124 80 ps to 5 ns

Frequency Ratio (53131, 53132, 53181)

Measurement is specified over the full signal range of each input.

Results Range 10⁻¹⁰ to 10¹¹

'Auto' Gate Time 100 ms

For Time or Digits Arming:

LSD Displayed: $\left(\frac{2\sqrt{2} \times t_{res}}{Gate\ Time \times \sqrt{Number\ of\ Samples}} + \frac{t_{jitter}}{Gate\ Time}\right) \times \frac{Frequency\ or\ Period}{}$

RMS Resolution (see graph 2):

$\left(\frac{4 \times \sqrt{t_{res}^2 + (2 \times Trigger\ Error^2)}}{Gate\ Time \times \sqrt{Number\ of\ Samples}} + \frac{t_{jitter}}{Gate\ Time}\right) \times \frac{Frequency\ or\ Period}{}$

| | | |
|--------------|----------------|-----------|
| | HP 53131A/181A | HP 53132A |
| t_{res} | | |
| t_{jitter} | | |

typical 500 ps 50 ps 225 ps 3 ps
see graphs for worst case resolution performance

Number of Samples =
Gate Time x Frequency (Frequency < 200 kHz)
Gate Time x 200,000 (Frequency > 200 kHz)

Systematic Uncertainty: $\left(\pm Time\ Base\ Error \pm \frac{t_{acc}}{Gate\ Time}\right)^x \times \frac{Frequency\ or\ Period}{}$

| | | |
|-----------|----------------|-----------|
| | HP 53131A/181A | HP 53132A |
| t_{acc} | | |

typical 100 ps 10 ps
worst case 300 ps 100 ps

Trigger: Default setting is Auto Trigger at 50%

Time Interval (53131A, 53132A)

Measurement is specified over the full signal ranges⁹ of Channels 1 and 2.

| | |
|----------------------|-------------------------------|
| Results Range | -1 ns to 10 ⁵ s |
| LSD | 500 ps (53131)/150 ps (53132) |

Phase (53131A, 53132A)

Measurement is specified over the full signal range of Channels 1 and 2.

| | |
|-----------------------|----------------|
| Results Range: | -180° to +360° |
|-----------------------|----------------|

Duty Cycle (53131A, 53132A)

Measurement is specified over the full signal range of Channel 1. However, both the positive and negative pulse widths must be greater than 4 ns.

| | |
|-----------------------|---|
| Results Range: | 0 to 1 (e.g. 50% duty cycle would be displayed as .5) |
|-----------------------|---|

Rise/Fall Time (53131A, 53132A)

Measurement is specified over the full signal ranges of Channel 1. The interval between the end of one edge and start of a similar edge must be greater than 4 ns.

| | |
|-----------------------|--|
| Edge Selection | Positive or Negative |
| Trigger | Default setting is Auto Trigger at 10% and 90% |
| Results Range | 5 ns to 10 ⁵ s |
| LSD | 500 ps (53131)/150 ps (53132) |

Pulse Width (53131A, 53132A)

Measurement is specified over the full signal range of Channel 1. The width of the opposing pulse must be greater than 4 ns.

| | |
|------------------------|--|
| Pulse Selection | Positive or Negative |
| Trigger | Default setting is Auto Trigger at 50% |
| Results Range | 5 ns to 10 ⁵ s |
| LSD | 500 ps (53131)/150 ps (53132) |

Totalize (53131A, 53132A)

Measurement is specified over the full signal range of Channel 1.

| | |
|----------------------|-----------------------|
| Results Range | 0 to 10 ¹⁵ |
| Resolution | ± 1 count |

Peak Volts (53131A, 53132A, 53181A)

Measurement is specified on Channels 1 and 2 for dc signals; or for ac signals of frequencies between 100 Hz and 30 MHz with peak-to-peak amplitude greater than 100 mV.

| | |
|----------------------|------------------|
| Results Range | -5.1 V to +5.1 V |
| Resolution | 10 mV |

Peak Volts Systematic Uncertainty
 for ac signals: 25 mV + 10% of V
 for dc signals: 25 mV + 2% of V
 Use of the input attenuator multiplies all voltage specifications (input range, results range, resolution and systematic uncertainty) by a nominal factor of 10.

Time Interval, Pulse Width, Rise/Fall Time (53131 and 53132 only):

$$\text{RMS Resolution: } \sqrt{(t_{res})^2 + \text{Start Trigger Error}^2 + \text{Stop Trigger Error}^2}$$

Systematic Uncertainty:

± (Time Base Error x Measurement) ± Trigger Level Timing Error ± 1.5 ns Differential Channel Error (53131A)
 ± (Time Base Error x Measurement) ± Trigger Level Timing Error ± 900 ps Differential Channel Error (53132A)
 where t_{res} = 750 ps for the 53131A; 300 ps for the 53132A

$$\text{Frequency Ratio: } \frac{Ch1}{Ch2}, \frac{Ch1}{Ch3}, \frac{Ch2}{Ch1}, \frac{Ch3}{Ch1} \text{ (53131A and 53132A)} \quad \frac{Ch1}{Ch2}, \frac{Ch2}{Ch1} \text{ (53181A)}$$

$$\text{LSD: Ratio } \frac{1}{2}: \frac{1}{Ch2 \text{ Freq} \times \text{Gate Time}} \quad \text{Ratio } \frac{2}{1}: \frac{Ch2 \text{ Freq}}{(Ch1 \text{ Freq})^2 \times \text{Gate Time}}$$

RMS Resolution:

$$\text{Ratio } \frac{1}{2}: \frac{2 \times \sqrt{1 + (Ch1 \text{ Freq} \times Ch2 \text{ Trigger Error})^2}}{Ch2 \text{ Freq} \times \text{Gate Time}}$$

$$\text{Ratio } \frac{2}{1}: \frac{2 \times Ch2 \text{ Freq} \times \sqrt{1 + (Ch1 \text{ Freq} \times Ch2 \text{ Trigger Error})^2}}{(Ch1 \text{ Freq})^2 \times \text{Gate Time}}$$

For measurements using Ch3, substitute Ch3 for Ch2 in these equations. To minimize relative phase measurement error, connect the higher frequency signal to channel 1.

Systematic Uncertainty: ± 2x resolution

Phase (53131 and 53132)

$$\text{RMS Resolution: } \sqrt{((t_{res})^2 + (2 \times \text{Trigger Error}^2)) \times \left(1 + \left(\frac{\text{Phase}}{360^\circ}\right)^2\right) \times \text{Frequency} \times 360^\circ}$$

Systematic Uncertainty: (± Trigger Level Timing Error ± 1.5 ns Differential Channel Error) x Frequency x 360° (53131)
 (± Trigger Level Timing Error ± 900 ps Differential Channel Error) x Frequency x 360° (53132)

Duty Cycle (53131 and 53132)

$$\text{RMS Resolution: } \sqrt{((t_{res})^2 + (2 \times \text{Trigger Error}^2)) \times (1 + \text{Duty Cycle}^2)} \times \text{Frequency}$$

| | | |
|-----------|--------|--------|
| t_{res} | 53131A | 53132A |
| | 750 ps | 300 ps |

Gate Time

Auto Mode, or 1 ms to 1000 s

Measurement Throughput

HP-IB ASCII 200 measurements/s (maximum)

Measurement Arming

Start Measurement Free Run, Manual, or External

Stop Measurement Continuous, Single, External, or Timed

Time Interval 100 μs to 10 s (53131A)
Delayed Arming 100 ns to 10 s (53132A)

Arming Modes
 (Note that not all arming modes are available for every measurement function.)

Auto Arming: Measurements are initiated immediately and acquired as fast as possible, using a minimum number of signal edges.

Timed Arming: The duration of the measurement is internally timed to a user-specified value (also known as the “gate time”).

Digits Arming: Measurements are performed to the requested resolution (number of digits) through automatic selection of the acquisition time.

External Arming: An edge on the External Arm Input enables the start of each measurement. Auto Arming, Timed arming modes or another edge on the External Arm Input may be used to complete the measurement.

Time Interval Delayed Arming: For Time Interval measurements, the Stop Trigger condition is inhibited for a user-specified time following the Start Trigger. The 53132A offers advanced time interval arming capabilities including use of user specified time or Channel 2 events to delay both Start and Stop Triggers.

Measurement Limits

Limit Checking: The measurement value is checked against user-specified limits at the end of each measurement.

Display Modes: The measurement result may be displayed as either the traditional numeric value or graphically as an asterisk moving between two vertical bars.

Out-of-Limits Indications:

- The limits annunciator will light on the front panel display.
- The instrument will generate an SRQ if enabled via HP-IB.
- The limits hardware signal provided via the RS-232 connector will go low for the duration of the out-of-limit condition.
- If the Analog Display mode is enabled, the asterisk appears outside the vertical bars, which define the upper and lower limits.

• **Fractional Time Base Error (see graph 3)**

Time base error is the maximum fractional frequency variation of the time base due to aging or fluctuations in ambient temperature or line voltage:

$$\text{Time Base Error} = \left(\frac{\Delta f}{f} \text{ aging rate} + \frac{\Delta f}{f} \text{ temperature} + \frac{\Delta f}{f} \text{ line voltage} \right)$$

Multiply this quantity by the measurement result to yield the absolute error for that measurement. Averaging measurements will not reduce (fractional) time base error. The counters exhibit negligible sensitivity to line voltage; consequently the line voltage term may be ignored.

• **Trigger Error**

External source and input amplifier noise may advance or delay the trigger points that define the beginning and end of a measurement. The resulting timing uncertainty is a function of the slew rate of the signal and the amplitude of spurious noise spikes (relative to the input hysteresis band). The (rms) trigger error associated with a single trigger point is:

$$\text{Trigger Error} = \frac{\sqrt{(E_{input})^2 + (E_{signal})^2}}{\text{Input Signal Slew Rate at Trigger Point}} \text{ (in seconds)}$$

where

E_{input} = RMS noise of the input amplifier: 1 mVrms (350μVrms Typical). Note that the internal measurement algorithms significantly reduce the contribution of this term.

E_{signal} = RMS noise of the input signal over a 225 MHz bandwidth (100 kHz bandwidth when the low-pass filter is enabled). Note that the filter may substantially degrade the signal's slew rate at the input of the trigger comparator.

For two-trigger-point measurements (e.g. Rise Time, Pulse Width), the Trigger Errors will be referred to independently as Start Trigger Error and Stop Trigger Error.

• **Trigger Level Timing Error (see graph 6)**

Trigger level timing error results from a deviation of the actual trigger level from the specified level. The magnitude of this error depends on resolution and accuracy of the trigger level circuit, input amplifier fidelity, input signal slew rate, and width of the input hysteresis band.

The following equations should be summed together to obtain the overall Trigger Level Timing Error. At the "High" sensitivity input setting, the hysteresis band can be assumed to be the sensitivity of the counter input (see page 2). Reduction of input sensitivity or use of the attenuator will increase the size of this band.

$$\text{Input Hysteresis Error: } \frac{0.5 \times \text{Hysteresis Band}}{\text{Input Signal Slew Rate at Start Trigger Point}} - \frac{0.5 \times \text{Hysteresis Band}}{\text{Input Signal Slew Rate at Stop Trigger Point}}$$

$$\text{Trigger Level Setting Error: } \pm \frac{15 \text{ mV} \pm (1\% \times \text{Start Trigger Level Setting})}{\text{Input Signal Slew Rate at Start Trigger Point}} \pm \frac{15 \text{ mV} \pm (1\% \times \text{Stop Trigger Level Setting})}{\text{Input Signal Slew Rate at Stop Trigger Point}}$$


• **Differential Channel Error**

The differential channel error term stated in several Systematic Uncertainty equations accounts for channel-to-channel mismatch and internal noise. This error can be substantially reduced by performing a TI calibration (accessible via the Utility Menu) in the temperature environment in which future measurements will be made.

Graph 1:
HP 53131A/181A - Worst Case RMS Resolution⁷
(Automatic or External Arming)

The graphs may also be used to compute errors for Period Measurements. To find the Period error (ΔP), calculate the frequency of the input signal ($F = 1/P$) and find the frequency error (ΔF) from the chart.

Then calculate the period error as: $\Delta P = \left(\frac{\Delta F}{F} \right) \times P$

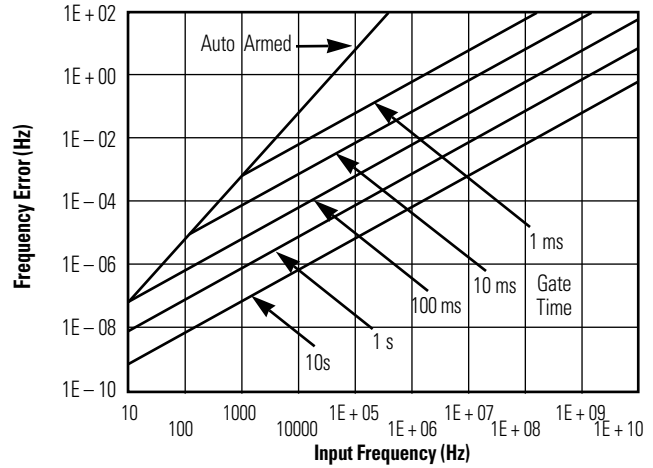

Graph 2:
HP 53131A/181A - Worst Case RMS Resolution⁷
(Time or Digits Arming)


⁷Graphs 1, 2, 4 and 5 do not reflect the effects of trigger error. To place an upper bound on the added effect of this error term, determine the frequency error from the appropriate graph and add a trigger error term as follows:

Time or Digit Arming


$$\text{Frequency Error} + \left(\frac{4 \times \sqrt{2} \times \text{Trigger Error}}{\text{Gate Time} \times \sqrt{\text{Number of Samples}}} \right) \times \frac{\text{Frequency or Period}}$$

Automatic or External Arming


$$\text{Frequency Error} + \left(\frac{\sqrt{2} \times \text{Trigger Error}}{\text{Gate Time}} \right) \times \frac{\text{Frequency or Period}}$$

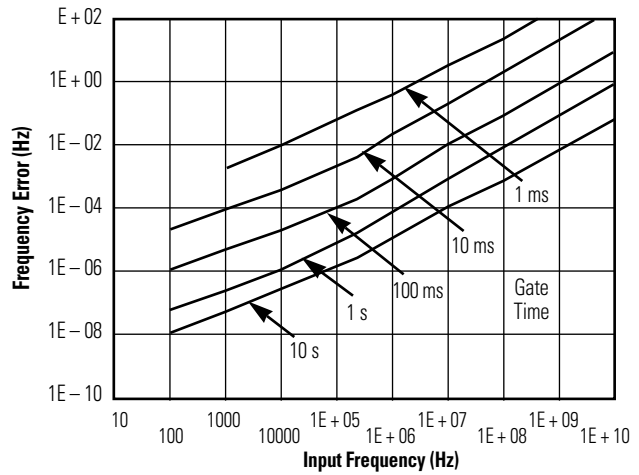


Graph 3:
Timebase Error

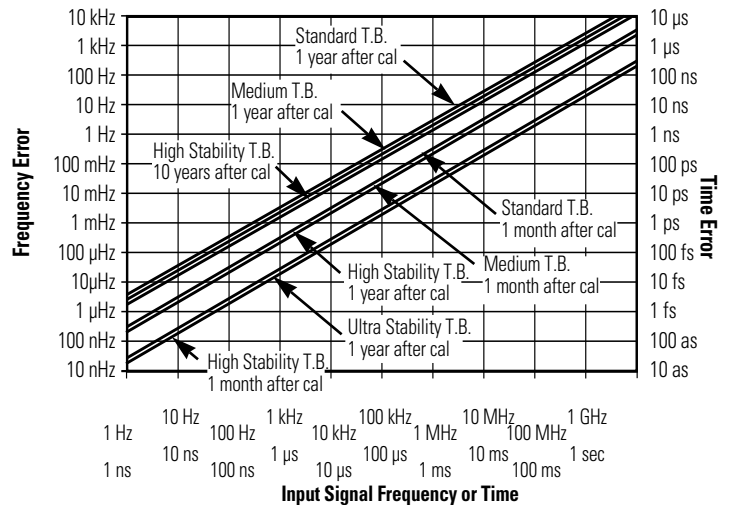


Graph 4: HP 53132A - Worst Case RMS Resolution⁷
(Automatic or External Arming)

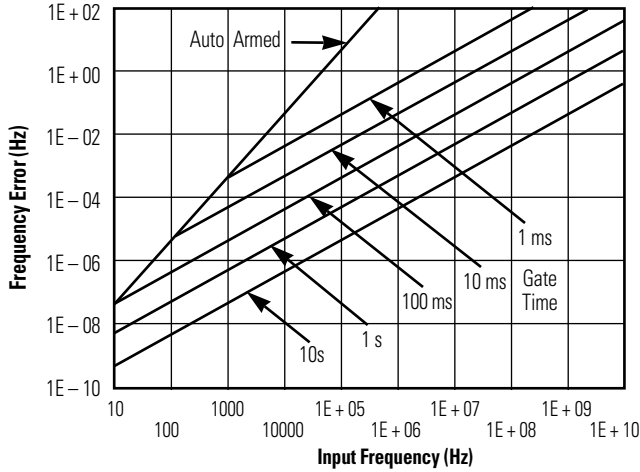

Graph 5: HP 53132A - Worst Case RMS Resolution⁷
(Time or Digits Arming)

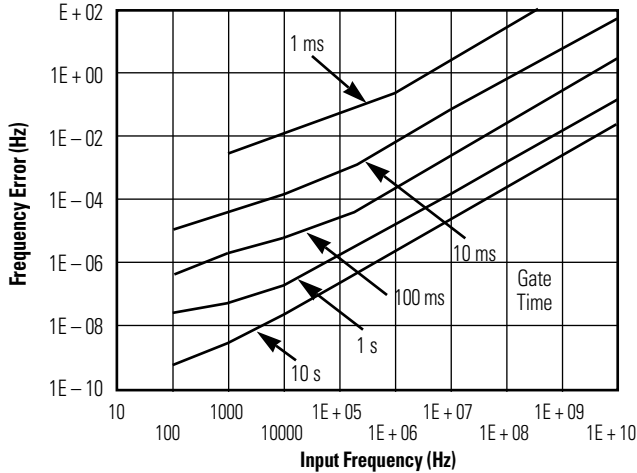

Graph 6: Trigger Level Timing Error
(Level Setting Error and Input Hysteresis)

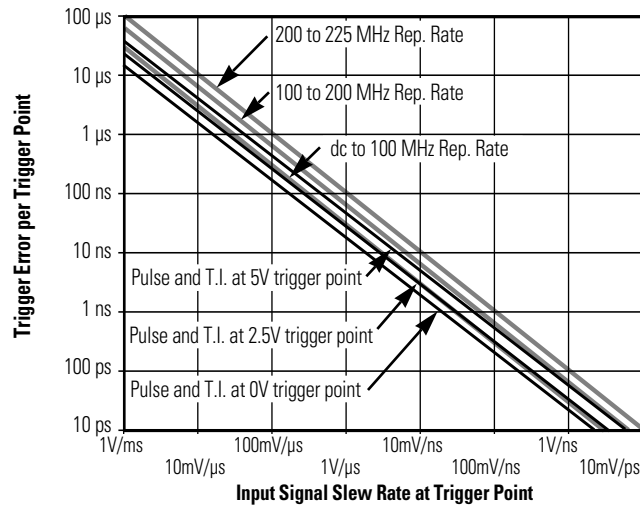

Measurement Statistics

Available Statistics: Mean, Minimum, Maximum, Standard Deviation

Number of Measurements: 2 to 1,000,000. Statistics may be collected on all measurements or on only those which are between the limit bands. When the Limits function is used in conjunction with Statistics, N (number of measurements) refers to the number of in-limit measurements. In general, measurement resolution will improve in proportion to \sqrt{N} , up to the numerical processing limits of the instrument.

Measurements: Statistics may be collected for all measurements except Peak Volts and Totalize.

General Information

Save and Recall: Up to 20 complete instrument setups may be saved and recalled later. These setups are retained when power is removed from the counter.

Rack Dimensions (HxWxD): 88.5 mm x 212.6 mm x 348.3 mm

Weight: 3.5 kg maximum

Warranty: 3 years

Power Supply:

ac 100 to 120 VAC \pm 10% - 50, 60 or 400 Hz \pm 10%
220 to 240 VAC \pm 10% - 50 or 60 Hz \pm 10%

dc (Option 002) 10 to 32 Vdc, 4A inrush

ac Line Selection: Automatic

Power Requirements: 170 VA maximum (30 W typical)

Environment: 0°C to 55°C operating
-40°C to 71°C storage

Remote Interface: HP-IB (IEEE 488.1-1987, IEEE 488.2-1987)

Remote Programming Language: SCPI-1992.0 (Standard Commands for Programmable Instruments)

Safety: Designed in compliance with IEC-1010, UL-3111-1 (draft), CAN/CSA 1010.1

EMC: CISPR-11, EN50082-1, IEC 801-2, -3, -4

Radiated Immunity Testing: When the product is operated at maximum sensitivity (20 mVrms) and tested at 3 V/m according to IEC 801-3, external 100 to 200 MHz electric fields may cause frequency miscounts.

Ordering Information

HP 53131A 10 digit/s, 500 ps Universal Counter
 HP 53132A 12 digit/s, 150 ps Universal Counter
 HP 53181A 10-digit/s RF Counter

Accessories included

Each counter comes with standard timebase, power cord, operating, programming and service manuals.

Manual options (please specify one when ordering)

| | | |
|----------------|--------------|--------------------|
| ABA US English | ABF French | ABO Taiwan Chinese |
| ABD German | ABJ Japanese | AB1 Korean |
| ABE Spanish | ABZ Italian | AB2 Chinese |

Other options

Opt. 001 Medium-stability timebase
 Opt. 002 External dc power*
 Opt. 010 High-stability timebase
 Opt. 012 Ultra-High stability timebase (HP 53132A only)
 Opt. 015 1.5 GHz RF input Ch 2 for HP 53181A only
 Opt. 030 3 GHz RF input Ch 3 (Ch 2 on HP 53181A)
 Opt. 050 5 GHz RF input with type N connector Ch 3 (Ch 2 on HP 53181A)
 Opt. 124 12.4 GHz RF input with type N connector Ch 3 (Ch 2 on HP 53181A)
 Opt. 060 Rear-panel connectors**
 Opt. 080 Delete Manual Set
 Opt. 1BP MIL-STD-45662A Calibration with test data
 Opt. 1CM Rack Mount Kit (P/N 5063-9240)***
 Opt. W50 Additional 2-year warranty (5-year total)****

* Not compatible with Option 060

** Opt 060 Configuration Table


| | 53131/132 | 53181 |
|-----------|---------------------------------------|---|
| Ch1 & Ch2 | front & rear (in parallel) | Ch1 front & rear (in parallel) |
| Ch3 | Opt 030 rear only front plugged | Ch2 Opt 015/030 rear only front plugged |
| Ch3 | Opt 050/124 front only | Ch2 Opt 050/124 front only |

*** For racking two side-by-side, order both Lock-link Kit (P/N 5061-9694) and Flange Kit (P/N 5063-9212)

**** Call HP DIRECT for more information on Opt. W50 prices.

Accessories

HP 34131A Carrying case
 HP 34161A Accessory pouch
 HP 34812A BenchLink Meter software

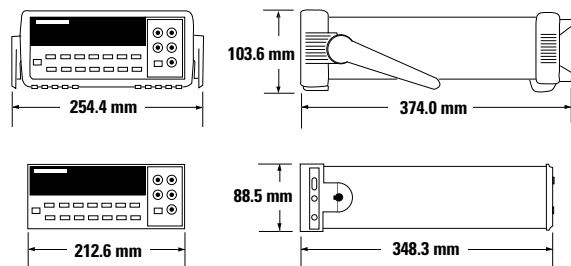

For more information about HP's nanoVolt meters and all other Hewlett-Packard basic instruments, and for a current sales office listing, visit our web site at <http://www.hp.com/go/bi>.

You can also contact one of the following centers and ask for a test and measurement sales representative.

United States:
 Hewlett-Packard Company
 Test and Measurement Call Center
 P.O. Box 4026
 Englewood, Colorado 80155-4026
 1 800 452 4844

Canada:
 Hewlett-Packard Canada Ltd.
 5150 Spectrum Way
 Mississauga, Ontario
 L4W 5G1
 (905) 206 4725

Europe:
 Hewlett-Packard
 European Marketing Centre
 P.O. Box 999
 1180 AZ Amstelveen
 The Netherlands
 (31 20) 547 9900

Japan:
 Hewlett-Packard Japan Ltd.
 Measurement Assistance Center
 9-1, Takakura-Cho,
 Hachioji-Shi,
 Tokyo 192, Japan
 Tel: (81) 426 56 7832
 Fax: (81) 426 56 7840

Latin America:
 Hewlett-Packard
 Latin American Region Headquarters
 5200 Blue Lagoon Drive
 9th Floor
 Miami, Florida 33126
 U.S.A.
 Tel: (305) 267-4245
 (305) 267-4220
 Fax: (305) 267-4288

Australia/New Zealand:
 Hewlett-Packard Australia Ltd.
 31-41 Joseph Street
 Blackburn, Victoria 3130
 Australia
 1 800 629 485

Asia Pacific:
 Hewlett-Packard Asia Pacific Ltd.
 17-21/F Shell Tower, Times Square,
 1 Matheson Street, Causeway Bay,
 Hong Kong
 Tel: (852) 2599 7777
 Fax: (852) 2506 9285

*Within Budget.
 Without Compromise.*

Data subject to change.
 Printed in the U.S.A. 9/98
 © Hewlett-Packard Company 1998
 HP BenchLink is a trademark of
 Hewlett-Packard Company. Windows is
 a trademark of Microsoft Corporation.
 5967-6039 EN