

# Agilent MATLAB<sup>®</sup> Data Analysis Software Packages for Agilent Oscilloscopes

## Data Sheet



- Enhance your InfiniiVision or Infiniium oscilloscope with the analysis power of MATLAB<sup>®</sup> software
- Develop custom analysis functions directly on Infiniium oscilloscopes
- Combine with other Agilent analysis software solutions
- Use with Agilent 5000, 6000, 7000, 9000, 90000, 90000 X Series or 86100D DCA-X oscilloscopes or 90008A oscilloscope/digitizers

MATLAB is a well known and respected data analysis software environment and programming language developed by The MathWorks and now available for purchase directly from Agilent. MATLAB software can be used to make measurements, analyze and visualize data, generate arbitrary waveforms, control instruments, and build test systems. It provides interactive tools and command-line functions for a wide range of applications, including signal processing, signal modulation, digital filtering, and curve fitting. MATLAB has more than 1,000,000 users in diverse industries and disciplines, and it is a standard at more than 3,500 colleges and universities worldwide.



### Get powerful MATLAB software options on the most popular Agilent oscilloscopes

With today's increasingly complex signals, the standard analysis routines that come with your oscilloscope are sometimes not enough. Now, Agilent has joined forces with The MathWorks to offer powerful MATLAB software options that can be ordered right with your new InfiniiVision or Infiniium oscilloscope. These options give you advanced math and analysis options and allow you to create your own math functions and filters to meet your specific needs.

MATLAB extends the functionality of Agilent oscilloscopes by enabling you to analyze and visualize your data, execute and test various filters/equalization methods/transfer functions, and develop automated tests. With these capabilities, you can:

- Test the functionality of electronic devices by making measurements with Agilent instruments and comparing them against known baselines in MATLAB
- Capture waveforms using an Agilent oscilloscope controlled through the Instrument Control Toolbox and then manipulate or analyze the waveforms within MATLAB
- Send MATLAB processed waveforms (either captured using an oscilloscope or derived mathematically) to an Agilent waveform/signal generator
- Verify new algorithms or measurement routines using live data from Agilent instruments



**Agilent Technologies**

The Instrument Control Toolbox is included with every MATLAB option Agilent sells. Using the Instrument Control Toolbox, you can easily communicate with the oscilloscope using one of the available built-in programming interfaces (for example, Ethernet LAN, USB, or GPIB -- options vary depending on the scope you use) to remotely control or import data into the MATLAB environment. Once the digitized data exists in an array in the MATLAB software, a wide variety of analysis and visualization tools are available. Depending on the enabled toolboxes, you can use various filters and custom algorithms to process and manipulate the waveform data. Then you can visualize the data using a wide variety of 2D and 3D plot types in the MATLAB software or send it back out to another instrument using the Instrument Control Toolbox. For instance, it might be useful to take a waveform data set that was captured by an Agilent oscilloscope, pass it through a transfer function in the MATLAB software, then use it as the input to an arbitrary waveform generator. You can use this method to tune a stimulus-response test.

Agilent provides the installation DVD and a license certificate redeemable for MATLAB software with the shipment of the instrument when you order the xxx-061 or xxx-062 option. (xxx represents the instrument model such as DSO5000, MSO6000, DSO7000, MSO9000, DSO90000A, DSOX90000A, 86100D, etc.)

## Benefits of Purchasing MATLAB software directly from Agilent

Adding MATLAB software to the purchase of your Agilent oscilloscope provides five key benefits:

- **Convenience:** Acquire software and analyzer on a single purchase order
- **Confidence:** MATLAB software sold through Agilent has been tested and qualified by Agilent
- **Support:** Contact either Agilent or The MathWorks for help with installation and technical questions
- **Quick start:** Acquire numerous application examples directly from Agilent to get started
- **Reliability:** Ensure that your MATLAB software is always available to you when you need it

## Two MATLAB Packages Available

Agilent offers two MATLAB software packages that are typical packages needed by oscilloscope users. These packages range from basic MATLAB capabilities to acquire and analyze data to full support for signal processing, communications systems, filter design, and automated testing:

Option	Description	Additional information
Option xxx-061	MATLAB – Basic signal analysis package	This basic configuration includes the MATLAB software environment and the Instrument Control Toolbox. Use this configuration to configure, control, and acquire data from an Agilent InfiniiVision or Infiniium oscilloscope. Also use it to perform basic signal analysis and visualization tasks.
Option xxx-062	MATLAB - Standard signal analysis package	Includes the products in the MATLAB – Basic signal analysis package plus the Filter Design Toolbox and Signal Processing Toolbox. Combining the Signal Processing Toolbox with the extended features of the Filter Design Toolbox in the standard analysis package provides digital and analog filter algorithms for use in the MATLAB environment. The filters and associated modeling and visualization tools are valuable for analyzing waveform data in MATLAB, but could also be used to emulate a theoretical circuit's response on the signal sampled by the oscilloscope.

**Table 1: Descriptions of MATLAB packages available (xxx = DSO5000, DSO6000, DSO7000, DSO9000, DSO90000A, DSOX90000A, 86100D, etc.)**

## Additional Details on Toolboxes Provided in the MATLAB Packages

The Instrument Control Toolbox lets you communicate with instruments, such as oscilloscopes, function generators and signal analyzers directly from MATLAB software. The toolbox enables you to communicate with instruments via instrument drivers, such as IVI and VXIplug&play, and commonly used communication protocols, such as GPIB, VISA, TCP/IP, and UDP. With the Instrument Control Toolbox product, you can generate data in MATLAB to send out to an instrument, or read data into MATLAB software for analysis and visualization.

The Signal Processing Toolbox is a collection of industry standard algorithms for analog and digital signal processing (DSP). Signal Processing Toolbox software also provides graphical user interfaces for interactive design and analysis and command-line functions for advanced algorithm development

The Filter Design Toolbox is a collection of tools that provide advanced techniques for designing, simulating, and analyzing digital filters. It extends the signal processing toolbox with filter architectures and design methods for complex real-time DSP applications, including adaptive and multirate filtering.

### Use MATLAB software packages with the 86100D DCA-X oscilloscope


The DCA-X is able to interface with MATLAB using Option 201 so that you can apply almost any filtering or signal processing algorithm you wish and see the results on the DCA-X immediately. It is recommended that users of the DCA-X purchase Option-062, "MATLAB - Standard digital analysis package" as it provides MATLAB, the Filter Design Toolbox, and the Signal Processing Toolbox, which are important toolboxes for developing and applying digital filters to your oscilloscope signals.

Starting with firmware revision 8.02 you can also run MATLAB scripts that you write yourself or that are recommended by standards such as IEEE 802.3, FC-PI-4 and others. This allows you to see live Waveform Dispersion Penalty (WDP), non-compensatable data-dependent jitter (ncDDJ) and other results right on your oscilloscope screen. Transmitter Waveform Dispersion Penalty (TWDP) is an example of a wrapper script as demonstrated in Figure 2.

### Use MATLAB software packages with N5430A Infiniium user-defined function (UDF)

Agilent offers an option with Infiniium 8000, 90000 and 90000 X Series oscilloscopes called user-defined function that enables oscilloscope users to process oscilloscope data in the MATLAB data analysis engine and display the results as an additional oscilloscope channel. User-defined function requires MATLAB software to create and modify these custom analysis routines. It is recommended that users of UDF also purchase option DS090000A-062 "MATLAB -

Standard Signal Analysis Package" as it provides MATLAB and the Signal Processing Toolbox, which is an important toolbox for developing and applying digital filters to your oscilloscope signals.

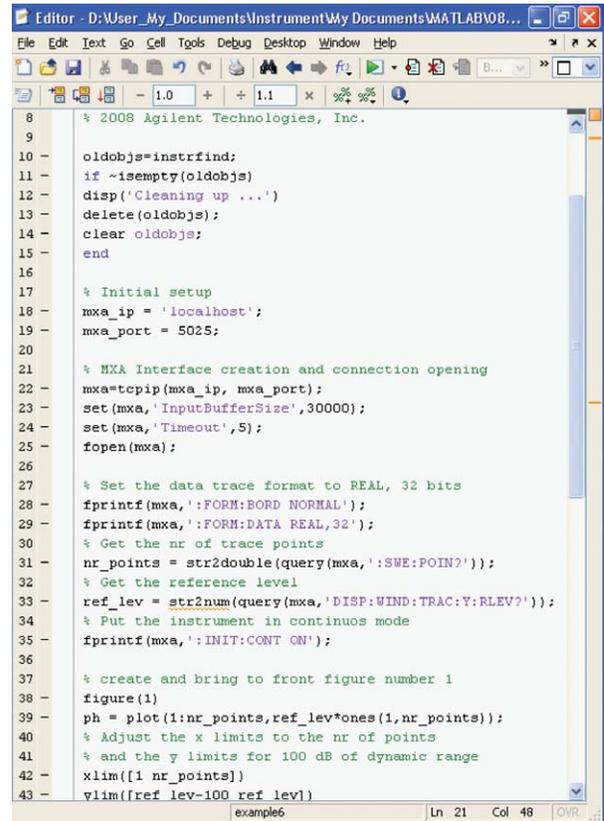

```
8 % 2008 Agilent Technologies, Inc.
9
10 oldobjs=instrfind;
11 if ~isempty(oldobjs)
12 disp('Cleaning up ...')
13 delete(oldobjs);
14 clear oldobjs;
15 end
16
17 % Initial setup
18 mxa_ip = 'localhost';
19 mxa_port = 5025;
20
21 % MXA Interface creation and connection opening
22 mxa=tcip(mxa_ip, mxa_port);
23 set(mxa,'InputBufferSize',30000);
24 set(mxa,'Timeout',5);
25 fopen(mxa);
26
27 % Set the data trace format to REAL, 32 bits
28 fprintf(mxa,':FORM:BORD NORMAL');
29 fprintf(mxa,':FORM:DATA REAL,32');
30 % Get the nr of trace points
31 nr_points = str2double(query(mxa,':SWE:POIN?'));
32 % Get the reference level
33 ref_lev = str2num(query(mxa,':DISP:WIND:TRAC:Y:RLEV?'));
34 % Put the instrument in continuous mode
35 fprintf(mxa,':INIT:CONT ON');
36
37 % create and bring to front figure number 1
38 figure(1)
39 ph = plot(1:nr_points,ref_lev*ones(1,nr_points));
40 % Adjust the x limits to the nr of points
41 % and the y limits for 100 dB of dynamic range
42 xlim([1 nr_points])
43 ylim([ref_lev-100 ref_lev])
```

Figure 1: Developing a new MATLAB application or modifying an existing MATLAB application using the MATLAB Editor provided by MATLAB

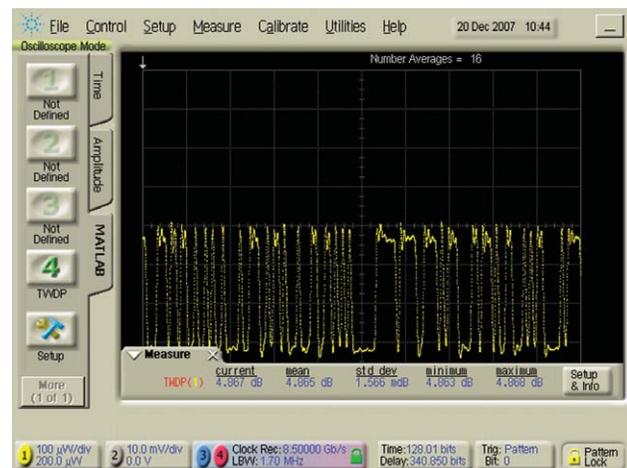


Figure 2: Example of a MATLAB script, TWDP, that expands the measurement functionality of the 86100D DCA-X by generating live, instant results viewable directly on the DCA-X from within the "classic" user-interface.

## Modern connectivity



Chose the best connection for your requirements:


- USB - seven ports
- LAN - 100 based-T
- GPIB
- LXI - class-C compliant

## Specifications:

Oscilloscopes:	Required software revision
Infiniium DSOX90000 Series	Rev 3.0 or later
Infiniium DSO90000A Series	Rev 2.1 or later
InfiniiVision DSO7000A/B Series	Rev 5.15 or later
InfiniiVision DSO6000A Series	Rev 5.15 or later
InfiniiVision DSO5000A Series	Rev 5.15

## Ordering Information

Model	Description
<b>5000 Series scopes:</b>	
DSO5000-061	MATLAB - Basic digital analysis package
DSO5000-062	MATLAB - Standard digital analysis package
<b>6000 Series scopes:</b>	
DSO6000-061	MATLAB - Basic digital analysis package
DSO6000-062	MATLAB - Standard digital analysis package
MSO6000-061	MATLAB - Basic digital analysis package
MSO6000-062	MATLAB - Standard digital analysis package
<b>7000 Series scopes:</b>	
DSO7000-061	MATLAB - Basic digital analysis package
DSO7000-062	MATLAB - Standard digital analysis package
MSO7000-061	MATLAB - Basic digital analysis package
MSO7000-062	MATLAB - Standard digital analysis package
<b>9000 series scopes:</b>	
DSO9000-061	MATLAB - Basic digital analysis package
DSO9000-062	MATLAB - Standard digital analysis package
MSO9000-061	MATLAB - Basic digital analysis package
MSO9000-062	MATLAB - Standard digital analysis package
<b>90000 Series scopes and 90000 X-Series oscilloscopes:</b>	
DSO90000A-061	MATLAB - Basic digital analysis package
DSOX90000A-061	MATLAB - Basic digital analysis package
DSO90000A-062	MATLAB - Standard digital analysis package
DSOX90000A-062	MATLAB - Standard digital analysis package
<b>86100D DCA-X</b>	
86100D-061	MATLAB - Basic digital analysis package
86100D-062	MATLAB - Standard digital analysis package

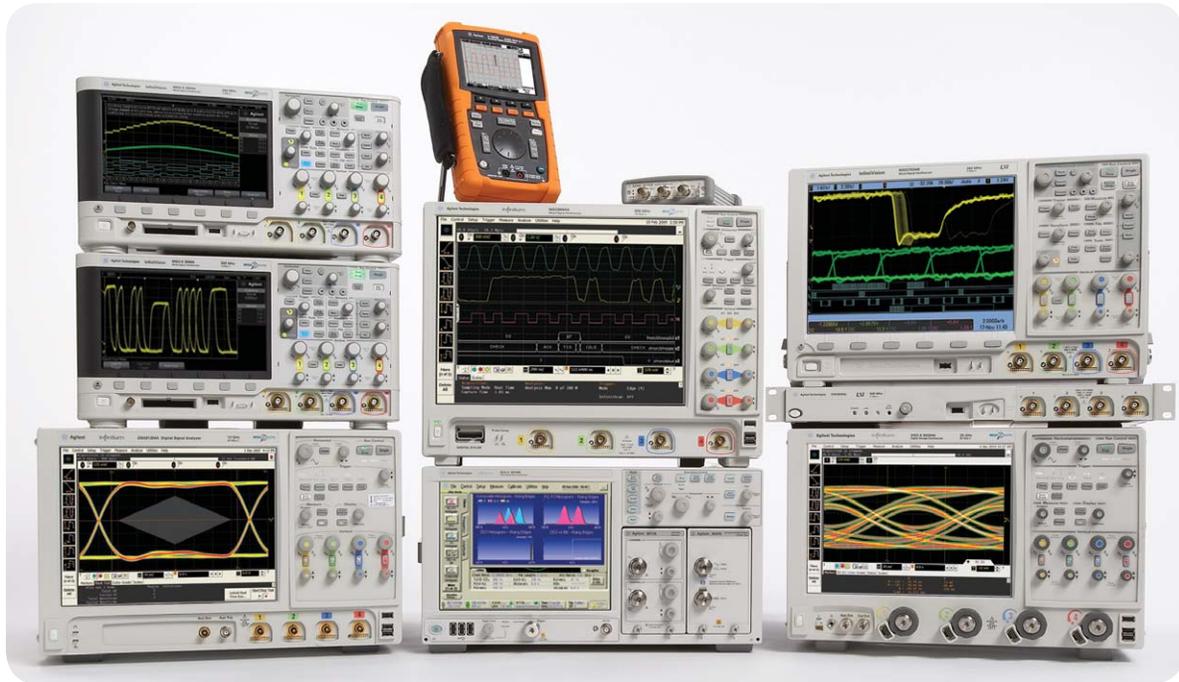

## Agilent Technologies Oscilloscopes

Multiple form factors from 20 MHz to >90 GHz | Industry leading specs | Powerful applications

To learn more about using MATLAB with Agilent oscilloscopes, to request a free MATLAB software trial, or to download MATLAB examples for Agilent oscilloscopes, go to [www.agilent.com/find/matlab\\_oscilloscopes](http://www.agilent.com/find/matlab_oscilloscopes)



Windows® is a U.S. registered trademark of Microsoft Corporation.

MATLAB® is a registered trademark of the The MathWorks, Inc.

Revised: June 8, 2011

Product specifications and descriptions in this document subject to change without notice.

© Agilent Technologies, Inc. 2011  
Published in USA, December 3, 2011  
5990-3353EN

Authorized Agilent Distributor

Click here to Buy:

**TRANSCAT**

800.800.5001

Transcat.com



**Agilent Technologies**